

# Xtra.CDI Shutdown Transponder Quick Start Guide GX-120 & GX-160

**FOLLOW THESE STEPS FOR A QUICK  
SETUP OF THE XTRA.CDI SHUTDOWN  
TRANSPONDER**



## Before you start

Listed below are the model numbers of the engines currently in production. De Haardt has verified that this manual is applicable to these models. If you want to connect the Xtra.CDI Shutdown Transponder to a different engine model, it is recommended to contact: **support@de-haardt.com**

**GX-120**

**RHQ4**

**GX-160**

**RHG4  
RHQ4**

### Safety notice

All products are designed as supplement to make karting safer, but cannot replace safe track procedures. If equipment fails, the normal operating procedure must still be adequate to safely operate the track.

Visit **www.de-haardt.com** for more information about the Xtra.CDI Shutdown Transponder and products. For technical issues or questions about the Xtra.CDI Shutdown Transponder. contact: **support@de-haardt.com**.



## 1

## Mounting the Xtra.CDI Shutdown Transponder


Mount the Xtra.CDI Shutdown Transponder as high as possible on a preferably flat plastic surface with the connector facing downwards, using three countersunk M5 bolts and lock-nuts. This ensures optimum radio sensitivity.



## 2


## Connecting the engine

Take the 'SUPPLY' cable with the two wires ends and combine the **blue** wire with the **blue** wire of the 'ENGINE+BRAKE' cable. Combine the **brown** 'SUPPLY' wire with the **brown** 'ENGINE+BRAKE' wire.

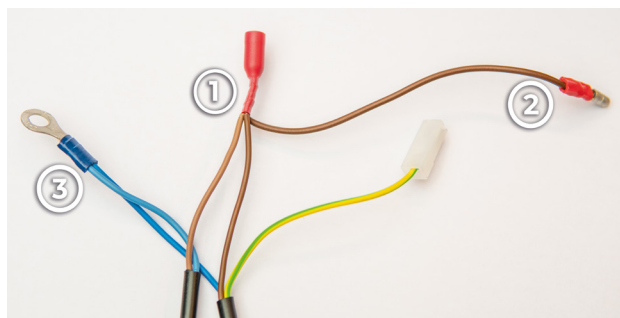

Usage of the **yellow/green** wire is not needed for the setup of the Xtra.CDI Shutdown Transponder, leave the wire hanging.

1. Connect the combined **brown** wire with the engine switch cable.
2. Connect the remaining **brown** wire with the black cable from the engine.
3. Connect the combined **blue** wire to the chassis of the engine.

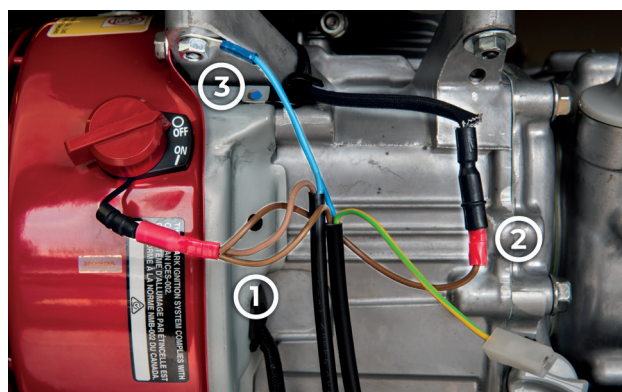


To power the Xtra.CDI Shutdown Transponder with a battery visit: [www.de-haardt.com](http://www.de-haardt.com) for the full product manual.


3

## Set the kart number with the Xtra.Remote Control

Before setting the kart number make sure other karts in the area are turned off.





Turn on the Xtra.Remote Control by pressing the  button.


Press the  button to enter the configuration menu and enter the default PINcode '0000'.


In the configuration menu press the upper left button.



Enter the serial number displayed on the front of the Xtra.CDI

Shutdown Transponder and press  or  to connect.

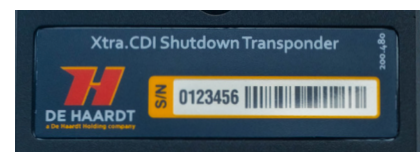

Enter the desired kart number and press  to assign it to the Xtra.CDI Shutdown Transponder.



For the full setup and configuration of the Xtra.Remote Control visit: [www.de-haardt.com](http://www.de-haardt.com) for the full product manual.

4

## Test the Xtra.CDI Shutdown Transponder

The last step is to test if the following functions of the Xtra.CDI Shutdown Transponder are working properly.

1. First test is to change the speed of the kart with the speed buttons 'SPD1(slowest), SPD2, SPD3 and SPD4 (fastest)'.
2. Second test is to stop all the engines by using the Xtra.Remote Control. Start the engine and press '**SHIFT**' followed by the '**STOP**' button.